


Different Mounting Options for the CardMan 31xx

1. Standard Vertical Mounting

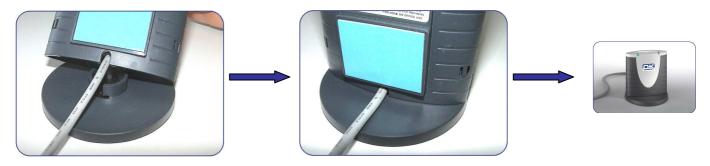

Pull the cable through the cut-out in the back of the reader.


Place the cable in the cut-out that is also in the base. Tuck the reader with its guide bars into the round opening and press slightly until it snaps in.

2. Standard Adhesion to a PC monitor or usage without Base

OR



After removing the blue foil, you can attach the reader to a monitor, etc.

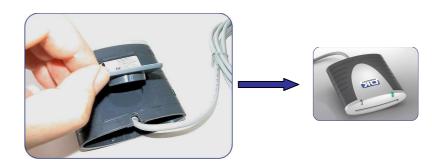

Or you can lift off the pad at the back of the reader so that it can be used without any base.

3. Optional horizontal mounting



Put the optional middle piece on the base. The upper part and base part ideally fit together when both cut-outs of the middle and base part are matched. The round opening, after the adhesion pad is removed, has its counterpart at the top of the assembled base part. A small guidance [1] bar at the back-end of both parts ensures stable assembly.